

Installation Instruction

CoverLawn CL 1201

Instruction single roll

1. Measure and mark the surface you aim to install CoverLawn® (CL). See Pic 1
2. Remove weed and other types that you do not want to grow through CL. Mow the surface to 12 mm.
3. The surface should be even for best result. CL aligns with the shape of the ground. If surface is uneven fill up with your growing soil.
4. Soil cut the edge on the sides of installation area. Lift up the soil cake or for a better end make a soil lift in the surface. Both works well but soil lift integrates a bit quicker. The outer edge on CL should be covered. Seed extra if you consider that is needed. Do not forget the furrow. See pic 2.
5. Roll out CL over entire installation surface.
- **Note:** Romb direction must be same as shot direction. See pic 3
6. Start anchor CL along the sides with the installation pins. It is more efficient to work 2&2 on each side. See pic 2 and 4.
7. If your length is longer that 6m start anchor in the middle and work your way towards one short end. Let the short end be loose. Then start from middle again towards the other short end that is still loose.
8. When the edges are anchored soil cut at the short ends and anchor. See pic 5.
9. Anchor top surface. See pic 6.
10. Knock down all anchor pins properly with a hammer. You should have a small howe afterwards.
11. At last add a top dress of sand so unevenness under CL gets filled and the surface becomes solid. This is done so the surface can be used at once and that the grass shall grab the backing. Use 0-4 mm sand. Usage app 5 kg/sqm.
12. Water if you have possibility so the sand can fill all irregularities.
13. Make a drawing where you have installed CL since that will integrate with natural turf after a while.
14. Do not forget to take pictures.

CoverLawn®

Hybrid with Natural turf


1.

2,4 meter width




Mark area


2.

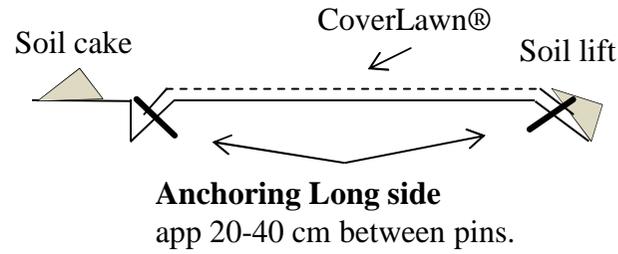

3.

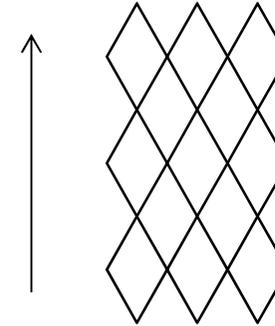


4.

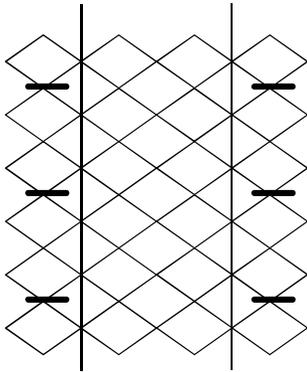


Anchoring Long side
app 20-40 cm between pins.

5.

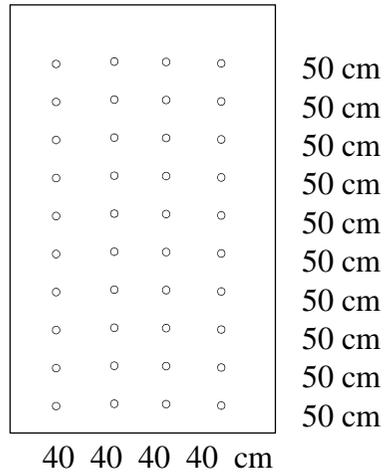

Top anchoring

6.



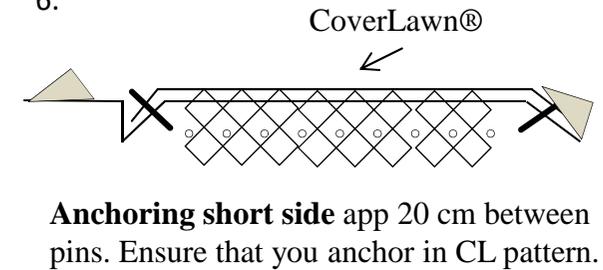


Instruction multiple rolls



1. Measure and mark the surface you aim to install CoverLawn® (CL). See Pic 1
2. Remove weed and other types that you do not want to grow through CL. Mow the surface to 12 mm.
3. The surface should be even for best result. CL aligns with the shape of the ground. If surface is uneven fill up with your growing soil.
4. Seed extra if you consider that is needed.
5. Roll out CL over entire installation surface.
- **Note:** Romb direction must be same as shot direction. See picture 2
6. Join the rolls by putting the outer hole on each roll over one other. Then press the installation pin through the holes. Place the pins every 10 cm. Place roll 1 and 2 beside each other edge to edge and anchor them. Then stretch roll 1 to desired width and join roll 3. Stretch roll 2 and anchor roll 4. Continue with rest of rolls. See pic 3.
7. Stretch the surface when all rolls are joined. Anchor support pins on the edges to keep the tension.
8. Start anchor CL on the mid points of all rolls. Work your ways out to the long sides. It is more efficient to work 2&2 on each side. See pic 4
9. Leave 20 cm on the outer rolls without pins. Knock down all anchor pins properly with a hammer. You should have a small cavity afterwards. Distance between pins see pic 5.
10. Soil cut the long sides after installed all pins on top surface and anchor. Lift the soil cake or just soil lift. If you select soil cake don't forget the seed in the furrow. See pic 6 and 7.
11. When all is anchored, make a soil cut at the short edges and anchor them. See pic 8.
12. At last add a top dress of sand so unevenness under CL gets filled and the surface becomes solid. This is done so the surface can be used at once and that the grass shall grab the backing. Use 0-4 mm sand. Usage app 5 kg/sqm.
13. Water if you have possibility so the sand can fill all irregularities and the CL back side.
14. Make a drawing where you have installed CL since that will integrate with natural turf after a while.
15. Do not forget to take pictures.

CoverLawn®



Hybrid with Natural turf

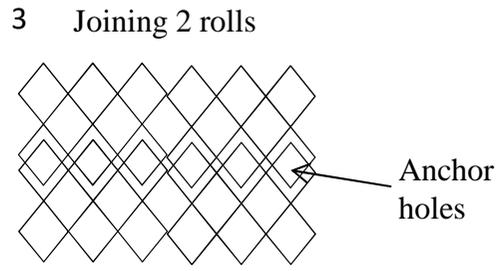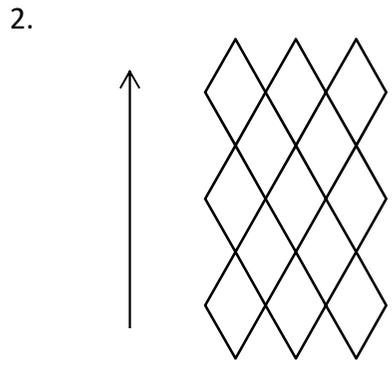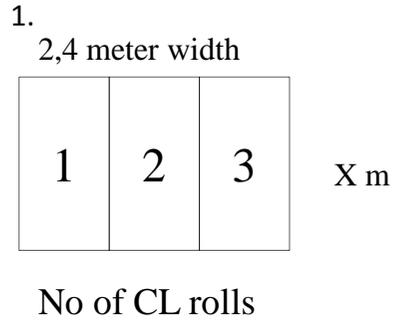

Place rolls so 2 holes cover each other. See pic below.

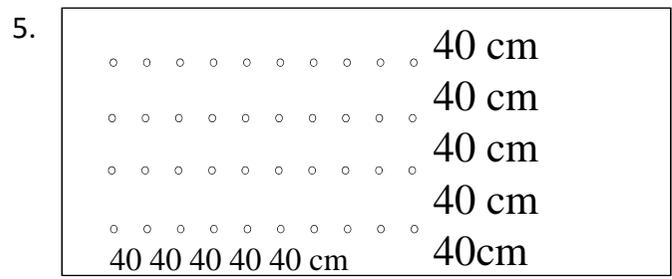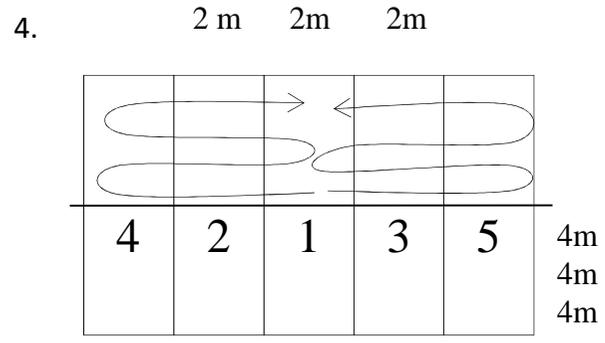

Pin distance 40 cm.

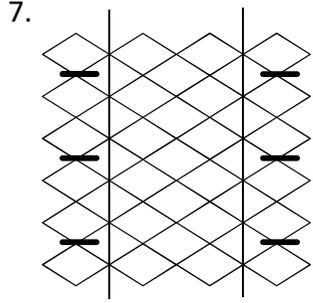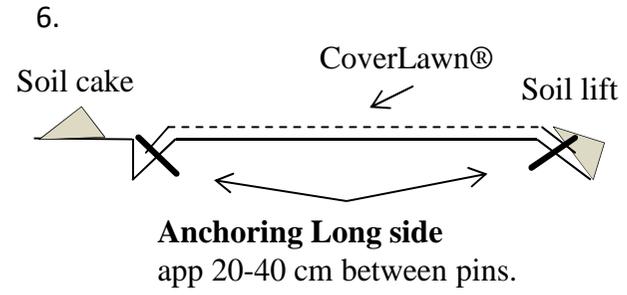

Anchoring Long side
app 20-40 cm between pins.

