

Installation Instruction

CoverLawn®


NRT 3002

Instruction single roll

1. Measure and mark the surface you aim to install CoverLawn® (CL).
2. Remove weed and other types that you do not want to grow through CL. Mow the surface as low as possible, 20 mm is perfect, otherwise put the mower on lowest level. The straighter pile the quicker integration.
3. The surface should be even for best result. CL aligns with the shape of the ground. If surface is uneven fill up with a 50/50 mix of sand 0-4 mm and soil. If the surface is a new construction the surface should be even and solid. Footprints are allowed but with a maximum depth of 5 mm.
4. Seed and fertilize before you place CL. Don't forget the furrow.
5. Roll out and stretch CL so the holes open up. Put support pins 20 cm from the long sides every 50 cm. See pic 1.
6. Soil cut the edge on the sides. Lift up the soil cake or for a better end make a soil lift in the surface. Both works well but soil lift integrates a bit quicker. The outer edge on CL **must** be covered. See pic2.
7. Start anchor CL in the furrow you created. Start from middle and work towards the short end. It is more efficient to work 2&2 on each side. Make sure you have good tension in CL. Use furrow to increase tension. If you work alone you have to shift side. When you pull CL max lift is 5-7 cm. See pic 2 and 3.
8. If your length is longer that 10m start anchor in the middle and work your way towards one short end. Let the end be loose. Then start from middle towards the other short end that is still loose. See pic 4.
9. Anchor top surface. See pic5.
10. Knock down all anchor pins properly with a hammer. You should have a small cavity afterwards. If you raise the piles before you knock the pins it will disappear.
11. When all pins are anchored soil cut the short edges and anchor them. See pic6.
12. At last add a top dress of sand so unevenness under CL gets filled and the surface becomes solid. This is done so the surface can be used at once and that the grass shall grab the backing. Use 0-4 mm sand. Usage app 5 kg/sqm.
13. Water if you have possibility so the sand can fill all irregularities and the CL back side.
14. Make a drawing where you have installed CL since that will integrate with natural turf after a while.
15. Do not forget to take pictures.

CoverLawn®
Hybrid with Natural turf



1. 2,4 meter width

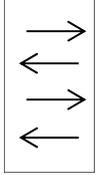


Stretch and mark




Support pins

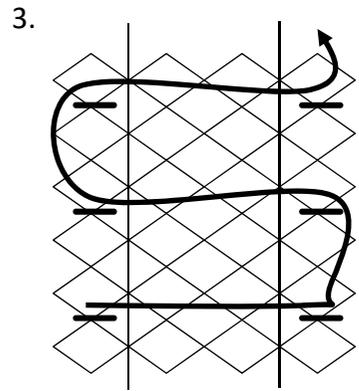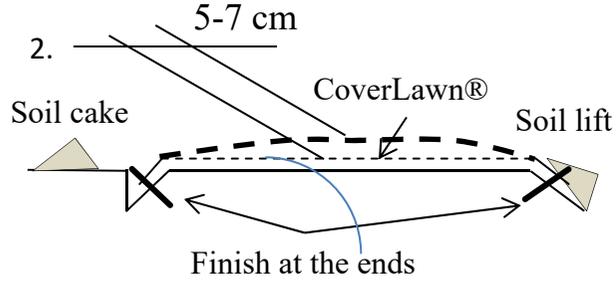


Anchor long side
Ca 20-40 cm between pins.

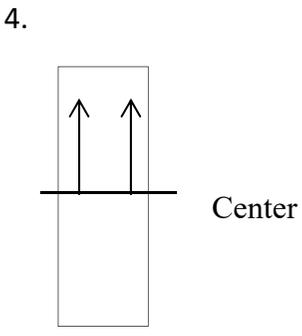

Center

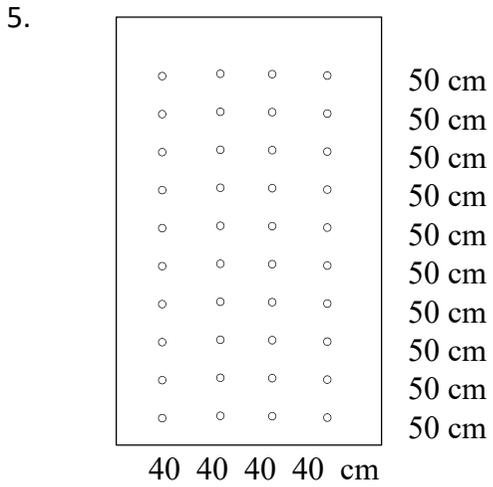

Anchor top

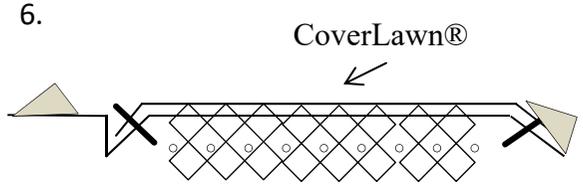


Anchor short side
Ca 20-40 cm between pins.
Ensure pins catch the backing

Instruction multiple rolls

1. Measure and mark the surface you aim to install CoverLawn® (CL). See Pic 1
2. Remove weed and other types that you do not want to grow through the CoverLawn. Mow the surface as low as possible, 20 mm is perfect, otherwise put the mower on lowest level. The straighter pile the quicker integration.
3. The surface should be even for best result. CL aligns with the shape of the ground. If surface is uneven fill up with a 50/50 mix of sand 0-4 mm and soil. If the surface is a new construction the surface should be even and solid. Footprints are allowed but with a maximum depth of 5 mm.
4. Seed and fertilize before you place CL.
5. Place CL over entire installation surface.
6. Join the rolls with the anchor pins. Place roll 1 and 2 beside each other. Join the rolls through the outer holes on each roll. Put pins every 15 cm. If you have more that 2 rolls stretch roll 1 that should be joined with roll 3. Put support pins to keep tension in roll 1. Continue with roll 2 and so on to all are joined. Tension should be 5-7 cm. See pic 1-3.
7. Start anchor CL on the mid points of all rolls. Work your ways out to the long sides. It is more efficient to work 2&2 on each side. If you raise the piles before you knock the pins it will disappear. See pic 4.
8. Leave 20 cm on the outer rolls without pins. Knock down all anchor pins properly with a hammer. You should have a small cavity afterwards. Distance between pins see pic 5.
9. Soil cut the outer long sides after installed all pins on top surface and anchor the outer long side. Lift the soil cake or just soil lift. If you select soil cake don't forget the seed in the furrow. See pic 6.
10. When all is anchored, make a soil cut at the short edges and anchor them. See pic 7.
11. At last add a top dress of sand so unevenness under CL gets filled and the surface becomes solid. This is done so the surface can be used at once and that the grass shall grab the backing. Use 0-4 mm sand. Usage app 5 kg/sqm.
12. Water if you have possibility so the sand can fill all irregularities and the CL back side.
13. Make a drawing where you have installed CL since that will integrate with natural turf after a while.
14. Do not forget to take pictures.



CoverLawn®

Hybrid with Natural turf

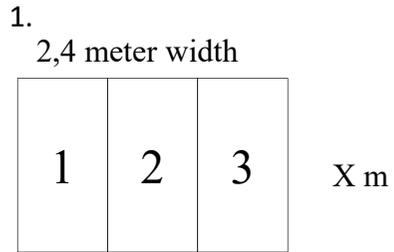


No of CL rolls


4. 2,4 m 2,4m 2,4m 2,4m 2,4m

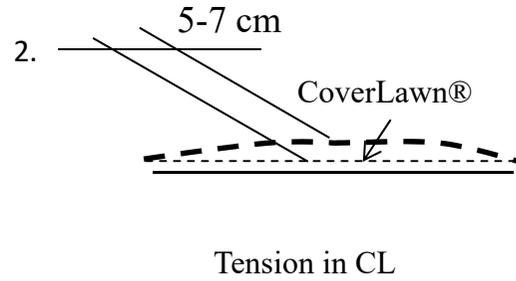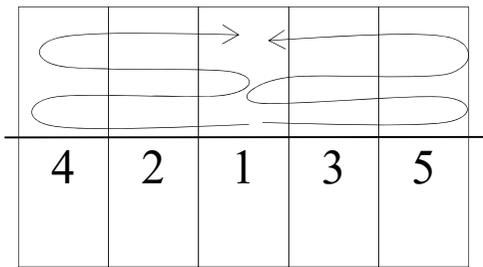

3 Joining 2 rolls

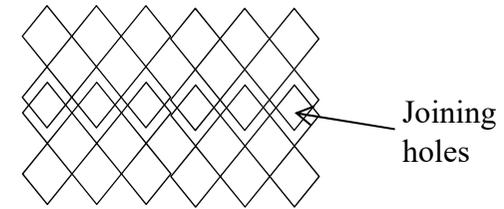

Place rolls so they align. See pic below.

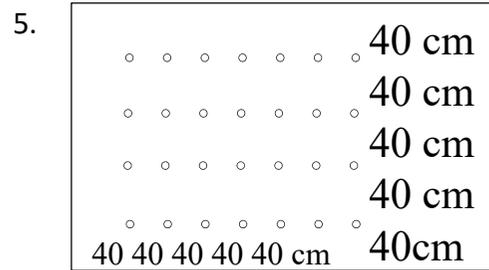

Pin with app 40-50 cm distance.

