

Installation Instruction

CoverLawn CL 2802

A Successful CoverLawn® installation depends on the following four factors:

1. Ground preparation
2. Opening up the holes (tension in the Hybrid)
3. Joining of the rolls
4. The outer edges are buried properly in the ground.

Instruction single roll


1. Measure and mark the surface you aim to install CoverLawn® (CL). Remove weed and other types that you do not want to grow through CL. Mow the surface to 20-25 mm. The straighter pile the quicker integration.
2. The surface should be even for best result. CL aligns with the shape of the ground. If the surface is uneven fill up with your growing earth/soil.
3. Place and stretch CL as your template. Place support pins 20 cm from the long side, every 50 cm. See Pic 1.
4. “Soil cut” the edge on the sides of installation area. Lift the soil cake or for a better end make a soil lift in the surface. Both works well but soil lift integrates a bit quicker. The outer edge on CL should be covered. Seed extra if you consider that is needed. Do not forget the furrow. See pic 2.
5. Start to anchor CL along the sides with the installation pins. It is more efficient to work 2&2 on each side. Ensure that you have tension in CL. Pull towards the long sides. If you work alone put support pins as resistance on opposite side. See pic 1 and 3.
6. If your length is longer than 10 m start anchor in the middle and work your way towards one short end. Let the end be loose. Then start again from middle towards the other short end. Pic 4.
7. Anchor the top surface. See pic 5.
8. Knock down all anchor pins properly with a hammer. You should have a small cavity afterwards.
9. When all pins are anchored, you can start to anchor the pins in the soil cut. See pic 6.
10. At last, add a top dress of sand so unevenness under CL gets filled and the surface becomes solid. This is done so the surface can be used at once and that the grass shall grab the backing. Use 0-4 mm sand. Usage app 5 kg/sqm.
11. Water if you have possibility so the sand can fill all irregularities and the CL back side.
12. Make a drawing where you have installed CL since that will integrate with natural turf after a while.
13. Do not forget to take pictures.
14. If you have questions just call or mail us.

CoverLawn®

Hybrid with Natural turf

1.

2,2-2,4 meter width

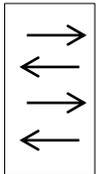


Stretch and mark



Support pins


2.

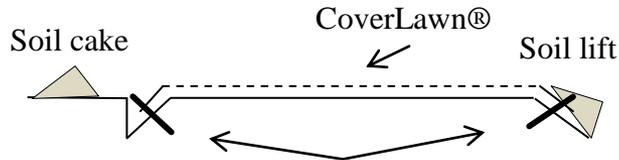

End finish sides

app 20-40 cm between pins.

3.

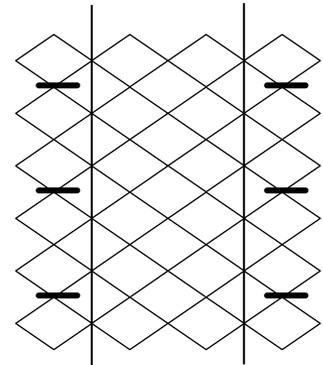

Anchoring Long side


app 20-40 cm between pins.

4.



Mitten


5.

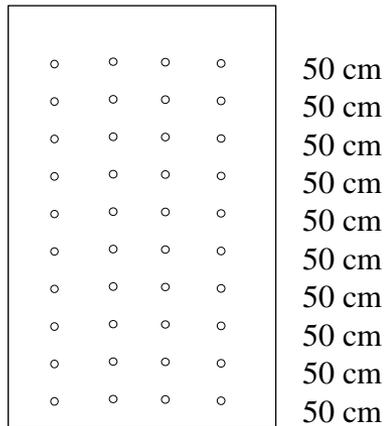

40 40 40 40 cm

Top anchoring

6.

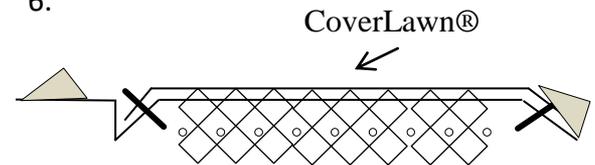

Anchoring short side app 20 cm between pins. Ensure that you anchor in CL pattern.

Instruction multiple rolls

1. Measure and mark the surface you are to install CoverLawn® (CL). See Pic 1
2. Remove weed and other types that you do not want to grow through the CL. Mow the surface as low as possible, 20-25 mm is perfect, otherwise put the mower on lowest level. The straighter pile the quicker integration.
3. The surface should be even for best result. CL aligns with the shape of the ground. If surface is uneven fill up with your growing earth/soil. Seed extra if you consider that is needed.
4. Place CL rolls over entire installation surface. See pic 1.
5. Place roll 1 and 2 beside each other. Fasten the pin through the outer holes on both rolls. Put pins every 15 cm. Then pull out the roll to desired width (the roll must have tension in it). If you have more than 2 rolls put support pins to keep the tension. Then join roll 3 with roll 1, 4 with 2 and so on. See pic 2 and 3.
6. Start anchor CL on the mid points of all rolls. Work your ways out to the long sides. Make one half at the time. It is more efficient to work 2&2 on each side. See pic 4.
7. Leave 20 cm on the outer rolls without pins. Knock down all anchor pins properly with a hammer on the top surface. You should have a small cavity afterwards. Distance between pins see pic 5.
8. Soil cut the outer long sides after you've installed all pins on the top surface and then anchor the outer edges in the soil cut. Lift the soil cake or just soil lift. If you select soil cake don't forget the seed in the furrow. Pic 6.
9. When all is anchored, make a soil cut at the short edges and anchor them. See pic 7.
10. At last, add a top dress of sand so unevenness under CL gets filled and the surface becomes solid. When this is done the surface can be used at once and that the grass shall grab the backing. Use 0-4 mm sand. Usage app 5 kg/sqm.
11. Water if you have possibility so the sand can fill all irregularities and the CL back side.
12. Make a drawing where you have installed CL since that will integrate with natural turf after a while.
13. Do not forget to take pictures.
14. If you have questions just call or mail us.

